


MKRY3 ROCK ASSEMBLY

! WARNING

ENSURE THE UNIT IS COMPLETELY COOL BEFORE STARTING INSTALLATION

TO AVOID DANGER OF SUFFOCATION KEEP THE PACKAGING BAG AWAY FROM BABIES AND CHILDREN. DO NOT USE IN CRIBS, BED, CARRIAGES OR PLAY PENS. THIS BAG IS NOT A TOY. KNOT BEFORE THROWING AWAY.

YOU WILL NEED:

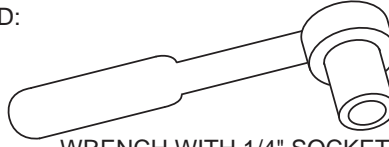

WRENCH WITH 1/4" SOCKET


INCLUDED IN THIS KIT:

ROCK #	PART #	DESCRIPTION
#1	W135-0549	REAR ROCK ASSEMBLY
#2	W135-0550	MID REAR ROCK ASSEMBLY
#3	W135-0551	MID RIGHT ROCK ASSEMBLY
#4	W135-0552	MID LEFT ROCK ASSEMBLY
#5	W135-0553	FRONT LEFT ROCK ASSEMBLY
#6	W135-0554	FRONT RIGHT ROCK ASSEMBLY


NOTE: All the rock assemblies have slots or openings to fit over the studs and brackets.




1. Remove the three screws from the rear log support and burner as shown.

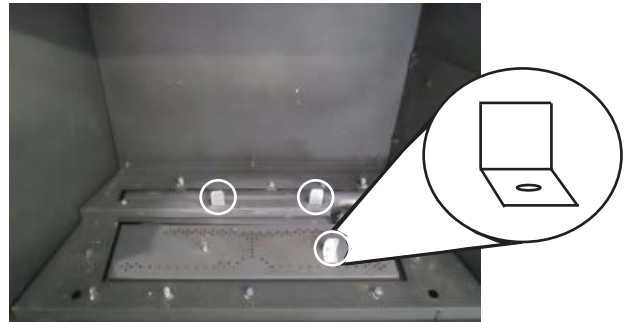

2. Secure the three brackets as shown. Make sure the two rear brackets face towards the front of the firebox and the bracket on the burner faces the rear.

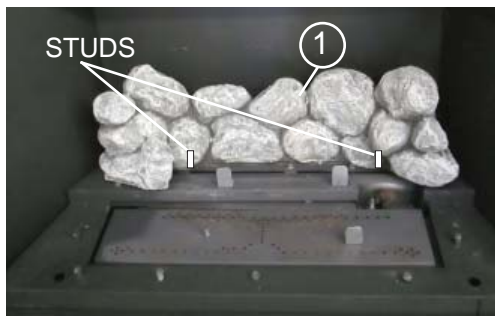

3. Place the #1 rock assembly onto the studs located on the rear log support as shown.

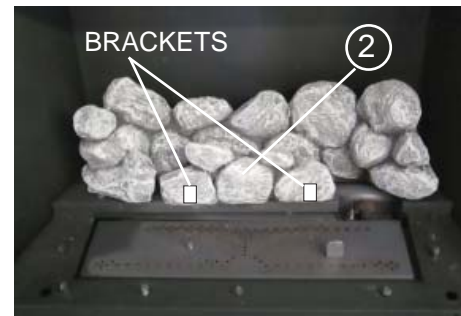


4. Place the #2 rock assembly onto the two corresponding brackets in front of the #1 rock assembly as shown.

Quality System Certified To

ISO
9001-2008


W415-1230 / 10.08.13

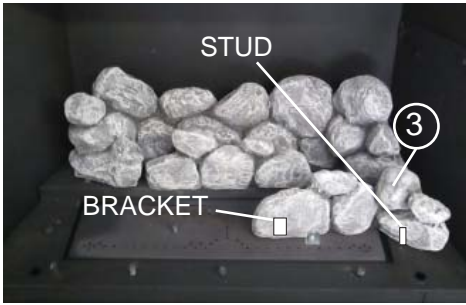

5. Place the # 3 rock assembly on the bracket and stud located onto the right of the burner cover as shown.



6. Place the # 4 rock assembly onto the two corresponding studs on the left side of the burner cover as shown.

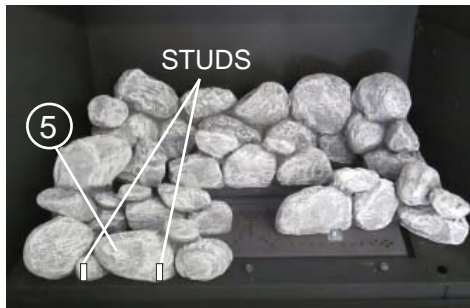

7. Place the # 5 rock assembly onto the two corresponding studs located on the left side of the front as shown.



8. Place the # 6 rock assembly on the two corresponding studs located on the right side of the front burner as shown.

9. Tear the glowing ember material into small thin pieces and spread evenly on the front of the burner. **NOTE: Do not overfill.**